



**DANIEL TIGER'S
NEIGHBORHOOD**



 
WARNING: CHOKING HAZARD - Small parts.
Not for children under 3 years.

3+

Daniel Tiger's Neighborhood Deluxe Electronic Trolley

Product Contents:

Trolley

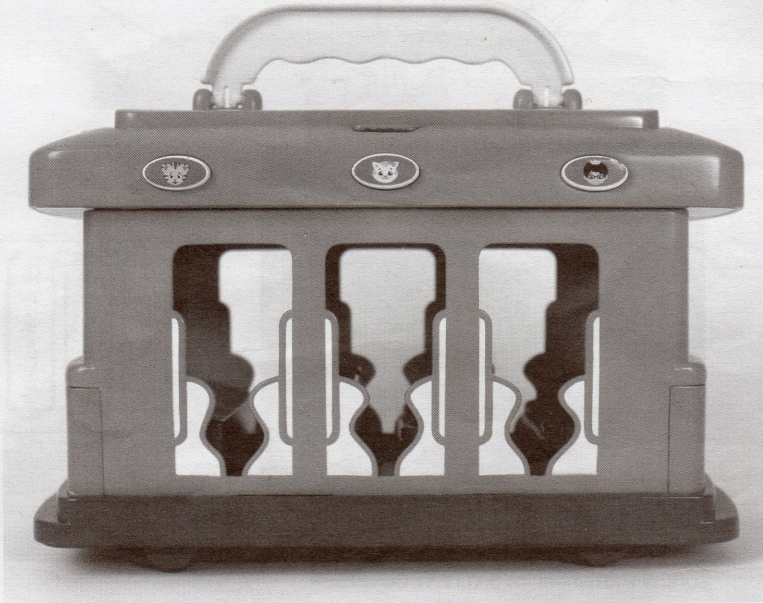

OPERATION:

BATTERY INFORMATION:

 
ADULT INSTALLATION REQUIRED

Requires 3 X 1.5V "AA" (R6) Batteries (included).

Batteries included are for "Try Me" purposes.


If performance diminishes after purchase, replace with fresh batteries.

1.

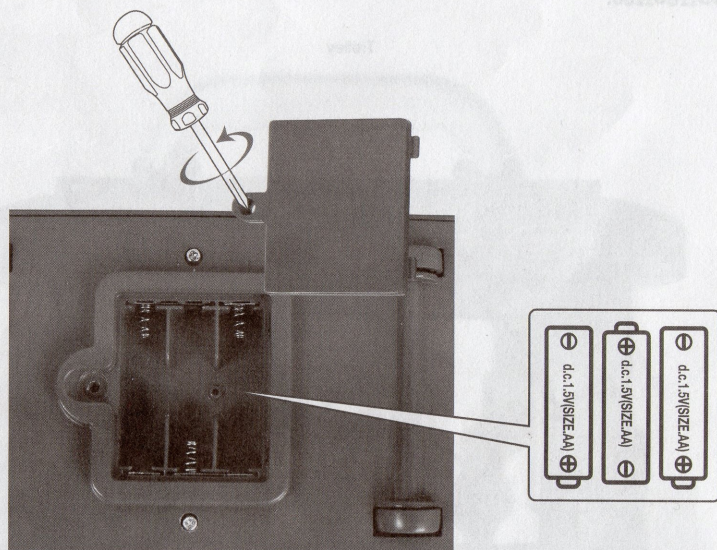

1. Locate the BATTERY COVER on BOTTOM OF TROLLEY.
2. Using a Philips Head screwdriver, loosen the SCREW and remove the BATTERY COVER.
3. Install 3x 1.5V "AA" (R6) BATTERIES in orientation shown.
4. Replace the BATTERY COVER and tighten the SCREW.

 2. To PLAY, slide the switch to the ON Position.

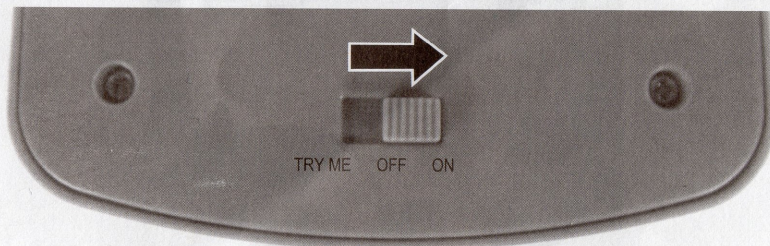

HOW TO PLAY

Press Buttons To Activate The Following Functions:

Daniel Tiger Phrases

 
"Do you want to take a ride on Trolley with me?"
 "It's a beautiful day in the neighborhood!"
 "Hop on board neighbor. Let's go for a ride!"

Katerina Kittycat Phrases

"Meow meow, so cute, meow meow!"
 "Making something is one way to say."
 "I love you."

Prince Wednesday Phrases

"A royal hello!"
 "Come sit by me."

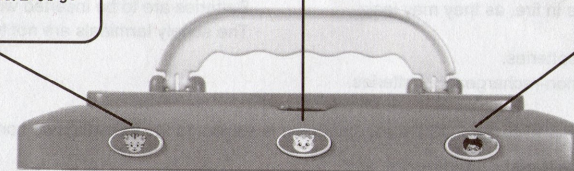

O the Owl Phrases

 
"Nifty Galifty!"
 "Wanna learn about Trolleys?
 There's a book for that!"

Miss Elaina Phrases

"Higa toots!"
 "Come with us toots, you'll see."


Mom Tiger Phrases

"Ugga Mugga"
 "Ok everyone. Let's go!"

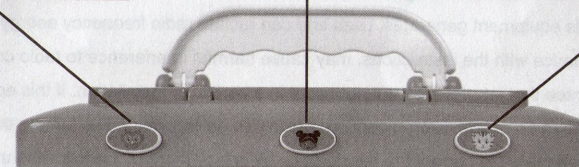

Press to activate the following:

 
- Ding Ding Sound
- Motor (forward motion 5 seconds)
- Light at Front

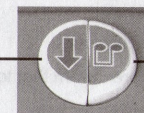


2 Alternating Songs:

- Neighborhood Theme Song
- Safety Song

 
How To Use The Crossing Light

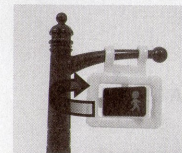

 1) Turn the "STOP" sign clockwise.

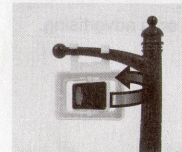


 2) Turn the "GO" sign counterclockwise.

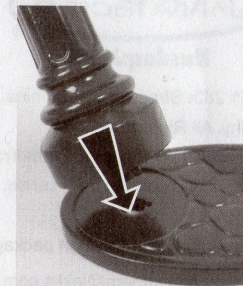

Hold base firmly and pull away crossing light to disconnect for storage. Gently push back in hole in base to assemble.

 How To Open The Lid

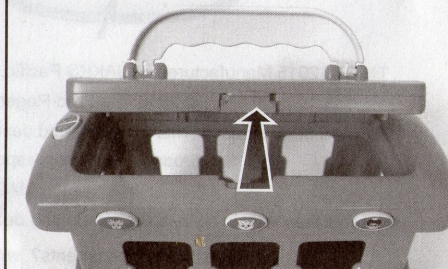

Press to open the door latch.

BATTERY SAFETY INFORMATION:

⚠ WARNING! Battery acid leakage can cause personal injury and cause damage to the product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes in contact with leaked battery acid. Leaking batteries may make "popping" sounds. Dispose according to Local, State or Federal Battery Laws.

NEVER mix old and new batteries or different brands of batteries.
NEVER mix alkaline, standard (carbon-zinc), rechargeable (nickel-cadmium) batteries with this product.
NEVER dispose of batteries in fire, as they may leak and explode.
NEVER use rechargeable batteries.
NEVER attempt to charge non-rechargeable batteries.

ALWAYS remove exhausted batteries from toy.
ALWAYS have an adult install batteries consistent with installation instructions.
ONLY use batteries specified by manufacturer.
Batteries are to be inserted with the correct Polarity.
The supply terminals are not to be short-circuited.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

For warranty information, visit www.jakks.com/warranty.



TM & © 2015 Manufactured by JAKKS Pacific, Inc., 2951 28th Street, Santa Monica, CA 90405 U.S.A.

© 2015 The Fred Rogers Company. All Rights Reserved.

All other symbols, marks, logos, and designs (collectively "Trademarks") are Trademarks of and proprietary to their respective owners and used under license.

MADE IN CHINA.

Contents may vary in style, color, shape and decoration from images shown on package or in advertising.

Questions or comments? www.jakks.com, consumers@jakks.com,
or 1-877-875-2557 in North America.

ATTENTION!

Remove and discard packaging ties and fasteners before giving toy to child.